Main Menu

General notes:
1. Message box Popup - change all "Cancel" button text to read "OK".
- Do NOT change File Name or Save To box text !

2. Add 5x5 square pixel character to Font file.
The 5x5px size is assuming 24pt font size.

3. Horizontal 'centering' of icons to text should omit the | character. Or simply move icon centering upward by 3 or so pixels.

Notes:
This menu layout and interaction is identical to 'youtube' Main Menu
- Scroll bar is fixed, list text scrolls.
- List continually scroll in'ribbon' - no beginning or end
- Items 2 spaces away are dark color (to look faded on dark background)
- Items 1 space away from bar are medium grey
- Item over bar is white (selected).

Font size = 24pt bold
text Line spacing (vertical) = 46px

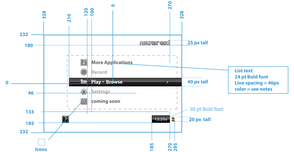

Notes:
text Line spacing (vertical) = 46px

Notes:
This menu layout and interaction is identical to 'youtube' Main Menu
- Scroll bar is fixed, list text scrolls.
- List continually scroll in'ribbon' - no beginning or end
- Items 2 spaces away are dark color (to look faded on dark background)
- Items 1 space away from bar are medium grey
- Item over bar is white (selected).

Font size = 24pt bold
text Line spacing (vertical) = 46px

Play Browse

- If NO cards are inserted, 'network' is at top level.
- If cards are inserted, 'network' moves down to below new card listing.
- 'network' is always located at the bottom of the directory list.

Or
make network & uPnP Browser fixed in the position shown.

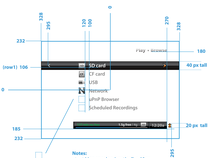

Notes:
- text Line spacing (vertical) = 46px
- List font size = 24pt
- List font style = semi-bold

(step 2 feature) Recording time available based on
- current storage selection's available space.
- current 'recording settings' (quality, frame rate, etc.)

Available storage space / total storage space
18pt font, #ffffff / 18pt font, #aaaaaa

Notes:
- Clock and clock backing are displayed globally.
- Meter bar (Left side) is displayed only on these screens:
  - Recording settings
  - File manager
  - Scheduled recordings

Recording Settings

Descriptions (left side)
- text Line spacing (vertical) = 36px
- List font size = 20pt
- List font style = semi-bold

Settings text (right side)
- text Line spacing (vertical) = 36px
- List font size = 24pt
- List font style = semi-bold

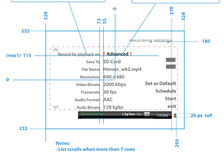

Notes:
- List scrolls when more than 7 rows of settings are available.

Settings
[general template]



- List will scroll to show more settings
- Only 7 items to be shown at one time (more seems overwhelming)
- down and/or up pointing grey ARROWS indicate more selections are available in that direction.
  - 1 arrow = up to 10 more selections are below/above
  - 2 arrow = up to 25 more selections are below/above
  - 3 arrow = up to 50+ more selections are below/above

Notes:
- List scrolls when more than 7 rows of settings are available.

List box
[general template]



- List scrolls down to show more row items
- Only 8 items to be shown at one time (better clarity on TV & less Univ-like)
  - Cursor never reaches line 1 or line 8. List scrolls instead.
  - Cursor only scrolls between lines 2 and 7 to allow preview of next list item and avoiding the dreaded scrolling past target.
  - at first startup, line 1 has text '^ - end of list -^'. Cursor starts at line 2.
- down and/or up pointing grey ARROWS indicate more selections are available in that direction.
  - arrow = up to 10 more selections are below/above
  - 2 arrow = up to 25 more selections are below/above
  - 3 arrow = up to 50+ more selections are below/above

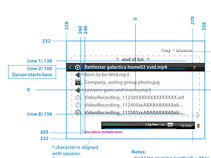

* character is aligned with squares
Font size = 16pt
color = #DE0070

Notes:
- text Line spacing (vertical) = 36px
- List font size = 24pt
- List font style = semi-bold

IR Blaster
[general template]

IR Master Setup
The OSD allows you to control virtually any device with a remote control from your OSD.
%xxx%: xxx0x0 xxx1 xxx2 xxx3 xxx4 xxx5 xxx6 xxx7 :
xx.#%%xxx% xxx0 : t/xxx@%x%x%x% xx0x0%x%x% x
xxx0xxx%x: x xxxx%: t/xx@%x%x% x g%xxx xx0x x%x x%x
xx0%x%x: t/xx@%x%x% x%xx x0x%x% t/xx x x0x %%xx
xx0x x%x x%x x%